

# **en/SinglePoint**

7

IngoBusker  
MikroKopter.de

# Inhaltsverzeichnis

<b><u>1 SinglePoint + Fixed/Relative Waypoints.....</u></b>	<b><u>1/18</u></b>
<b><u>2 Suitable transmitter.....</u></b>	<b><u>2/18</u></b>
<b><u>3 Anzahl der zu speichernden SinglePoints / WP-Listen.....</u></b>	<b><u>3/18</u></b>
<b><u>4 SinglePoint place + load.....</u></b>	<b><u>4/18</u></b>
<u>4.1 Operation via Graupner HoTT.....</u>	<u>4/18</u>
<u>4.1.1 1. open the Text-Telemetry.....</u>	<u>4/18</u>
<u>4.1.2 2. place and save a SinglePoint.....</u>	<u>4/18</u>
<u>4.1.3 3. load SinglePoint.....</u>	<u>5/18</u>
<u>4.1.4 4. fly automatically to a SinglePoint.....</u>	<u>5/18</u>
<u>4.2 Operation via Jeti.....</u>	<u>6/18</u>
<u>4.2.1 1. open the Text-Telemetry.....</u>	<u>6/18</u>
<u>4.2.2 2. place and save a SinglePoint.....</u>	<u>7/18</u>
<u>4.2.3 3. load SinglePoint.....</u>	<u>7/18</u>
<u>4.2.4 4. fly automatically to a SinglePoint.....</u>	<u>7/18</u>
<b><u>5 Fixed/Relative Waypoints.....</u></b>	<b><u>9/18</u></b>
<u>5.1 Operation via Graupner HoTT.....</u>	<u>9/18</u>
<u>5.1.1 1. open the Text-Telemetry.....</u>	<u>9/18</u>
<u>5.1.2 2. load a waypoint flight (Fixed Positions).....</u>	<u>9/18</u>
<u>5.1.3 3. load a waypoint flight (Relative Positions).....</u>	<u>10/18</u>
<u>5.1.4 4. fly automatically Relative Waypoints.....</u>	<u>11/18</u>
<u>5.2 Operation via Jeti.....</u>	<u>12/18</u>
<u>5.2.1 1. open the Text-Telemetry.....</u>	<u>12/18</u>
<u>5.2.2 2. load a waypoint flight (Fixed Positions).....</u>	<u>12/18</u>
<u>5.2.3 3. load a waypoint flight (Relative Positions).....</u>	<u>13/18</u>
<u>5.2.4 4. fly automatically Fixed Waypoints.....</u>	<u>14/18</u>
<b><u>6 Airspeed between the points.....</u></b>	<b><u>15/18</u></b>
<b><u>7 Altitudes between the single points:.....</u></b>	<b><u>16/18</u></b>
<b><u>8 Video.....</u></b>	<b><u>18/18</u></b>

# 1 SinglePoint + Fixed/Relative Waypoints

With an appropriate remote control you have the option to:

- save or load **SinglePoint Waypoints** during flight  
or
- an to open an already existing **Fixed/Relative Waypoints-flight** .

## **SinglePoint Waypoints**

When saving "single point" waypoints, the position of the Copters can be saved directly and reloaded.  
So you can fly over and over again at the same position.

Logged are In this case:

- the current position
- the current altitude
- and the direction of view of the copter  
(Camera tilt will be displayed but not saved!)

## **Fixed/Relative Waypoints**

A planned waypoints flight, can be stored on the SD card in the copter.

Such an waypoint flight you can open and fly over and over again via the transmitter.

You can load such a waypoint flight **Fixed**. Here you load the planned waypoint flight exactly for the position for which it was planned.

Or you load such a waypoint flight **Relative**. Here you can open and place the Waypoint flight at the place where the copter actually is.

See also below under [Fixed/Relative Waypoints](#).

## 2 Suitable transmitter

You can use this functions only with an **Graupner HoTT** or an **Jeti** transmitter.  
Using other remote control models is currently not possible


## **3 Anzahl der zu speichernden SinglePoints / WP-Listen**

In the free version you can save up to 4 !Single Points or Fix/Relative waypoints lists in your copter.

And if you buy the commercial license it is already included to save up to 99 SinglePoints or Fix/Relative lists in your copter.


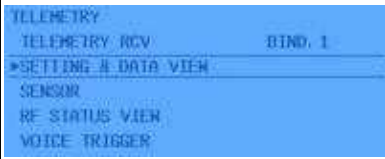


## 4 SinglePoint place + load

### 4.1 Operation via Graupner HoTT

<p>It is operated via the touch-buttons <b>SET</b> and <b>ESC</b> and the touch-buttons <b>left/right/up/down</b> on your transmitter.</p>	 <p>(example image MC-32 HoTT)</p>
--	--

#### 4.1.1 1. open the Text-Telemetry

The menu to save and load a SinglePoints can be found in the Text-Telemetry.


press the touch-buttons <b>ESC</b> a little longer ...	... until the <b>TELEMETRIE</b> opens. Select here the menu <b>SETTING &amp; DATA VIEW</b> ...	... and open it with the touch-button <b>SET</b> ...	... then "click" to the right until the Text-Telemetry is displayed.
			

Once you open the text telemetry, you can reach different subwindows from here.  
To navigate through the subwindows use the left/right/up/down touch-buttons.

#### 4.1.2 2. place and save a SinglePoint

Fly your copter to the place in the air where you will save the waypoint and ...


... change in the Text-Telemetrie with the left/right buttons to <b>Store single Position</b> ...	... select with up / down the desired memory location ...	... and save it with the touch-button <b>SET</b> .
---	---	--

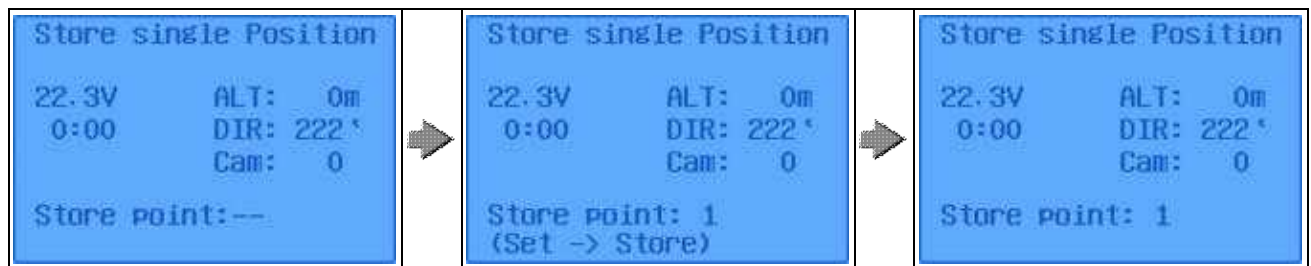

- The stored waypoint includes now the current position, the altitude and the current direction of view of the copter.  
Please note that the camera tilt will not be saved.

### 4.1.3 3. load SinglePoint

To load already individually saved "[SinglePoint](#)" waypoints...

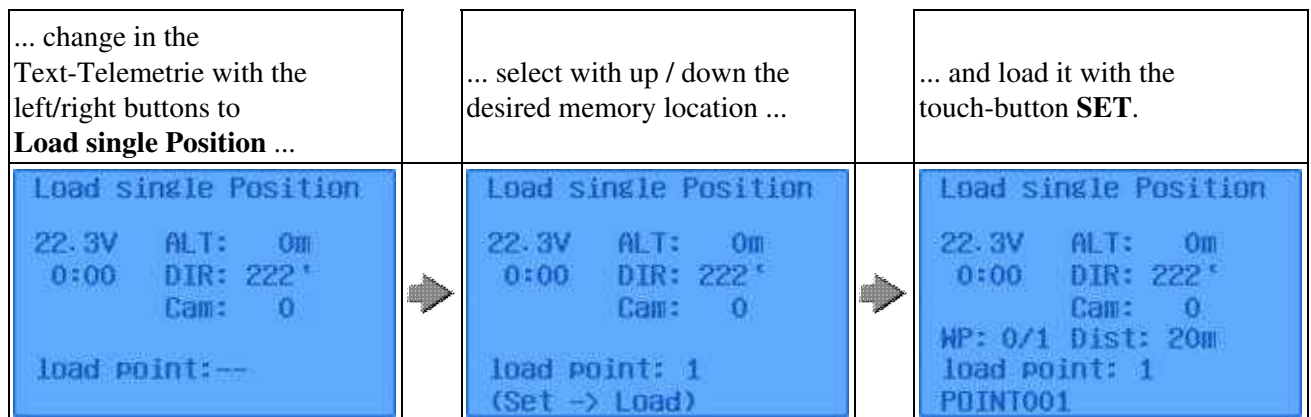

### 4.1.4 4. fly automatically to a SinglePoint

To start then the automatic waypoint flight to the [SinglePoint](#), proceed as follows:

- activate [CareFree](#)
- activate [AltitudeHold](#)
- activate [ComingHome](#)


- Normally the function *AltitudeHold* and *PositionHold* are already activated. Then you only have to activate *CareFree* and switch from *PositionHold* to *ComingHome* to start the waypoint flight.

If you switch back to *PositionHold* during the waypoint flight, the copter then interrupts the waypoint flight.

Turn back to *ComingHome* to continue the waypoint flight.







To stop and clear the waypoint flight you have to switch to **OFF** (from *PositionHold* or *ComingHome*).  
If you now switch to *ComingHome* the copter will fly back to the place where you start and lift of the copter.

## 4.2 Operation via Jeti

<p>It is operated via the buttons <b>left/right/up/down</b> on your Jeti-Box.</p>	 <p>(example image JetiBox Mini)</p>
---	---

### 4.2.1 1. open the Text-Telemetry

The menu to save and load a SinglePoints can be found in the Text-Telemetry.





<p>After switching on the copter you see "Tx" in the display. With a "click" to the right ...</p>	<p>... you change to "Rx". And with another "click" to the right ...</p>	<p>... to Mx.</p>
		
 		
<p>A "click" down opens the Text-Telemetry -&gt;</p>		

Once you open the text telemetry, you can reach different subwindows from here.  
To navigate through the subwindows use the left/right/up/down buttons.



## 4.2.2 2. place and save a SinglePoint





Fly your copter to the place in the air where you will save the waypoint and ...

... change in the Text-Telemetrie with the left/right buttons to <b>Save singl. Point ...</b>	...	... a "click" downward opens the submenu ...	...	... and select with up / down the desired memory location.
	→		→	
				↓
A "click" to the right stores the waypoint ->				

- The stored waypoint includes now the current position, the altitude and the current direction of view of the copter.  
Please note that the camera tilt will not be saved.

## 4.2.3 3. load SinglePoint

To load already individually saved "[SinglePoint](#)" waypoints...

... change in the Text-Telemetrie with the left/right buttons to <b>Load singl. Point ...</b>	...	... a "click" downward opens the submenu ...	...	... select with up / down the desired memory location.
	→		→	
				↓
A "click" to the right then opens the waypoint ->				

- In the last window you see then also the distance from the current space of the copter to the waypoint and the altitude of the waypoint.

## 4.2.4 4. fly automatically to a SinglePoint

To start then the automatic waypoint flight to the [SinglePoint](#), proceed as follows:

- activate [CareFree](#)

- activate [AltitudeHold](#)
- activate [ComingHome](#)

- Normally the function *AltitudeHold* and *PositionHold* are already activated. Then you only have to activate *CareFree* and switch from *PositionHold* to *ComingHome* to start the waypoint flight.

If you switch back to *PositionHold* during the waypoint flight, the copter then interrupts the waypoint flight.

Turn back to *ComingHome* to continue the waypoint flight.

To stop and clear the waypoint flight you have to switch to **OFF** (from *PositionHold* or *ComingHome*).

If you now switch to *ComingHome* the copter will fly back to the place where you start and lift of the copter.

# 5 Fixed/Relative Waypoints

## 5.1 Operation via Graupner HoTT


It is operated via the touch-buttons **SET** and **ESC** and the touch-buttons **left/right/up/down** on your transmitter. How to save an on your computer planed waypoint flight on the copter you can see here: [WP-Editor](#)



(example image MC-32 HoTT)

### 5.1.1 1. open the Text-Telemetry


The menu to save and load a SinglePoints can be found in the Text-Telemetry.

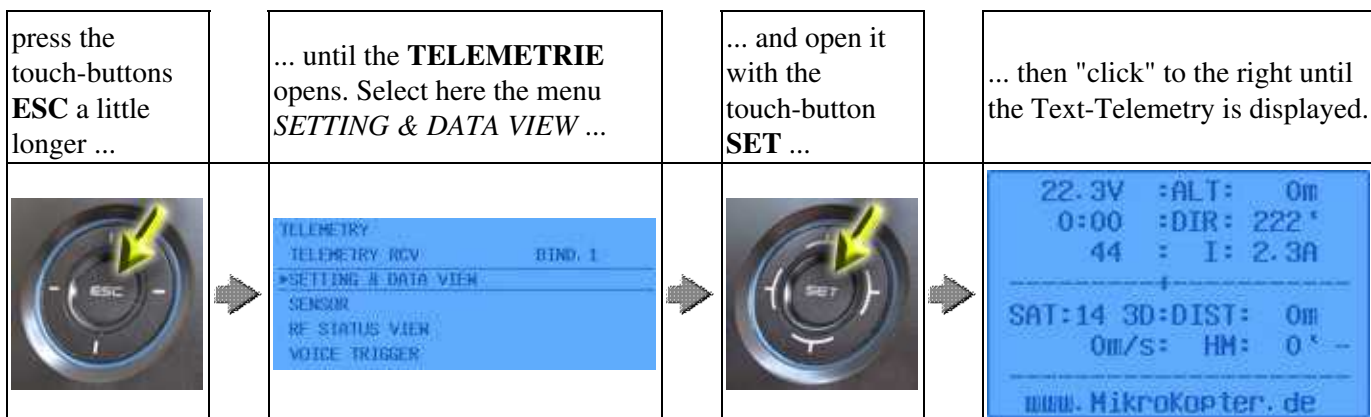


Once you open the text telemetry, you can reach different subwindows from here. To navigate through the subwindows use the left/right/up/down touch-buttons.

### 5.1.2 2. load a waypoint flight (Fixed Positions)

 
To load saved waypoints flights ...



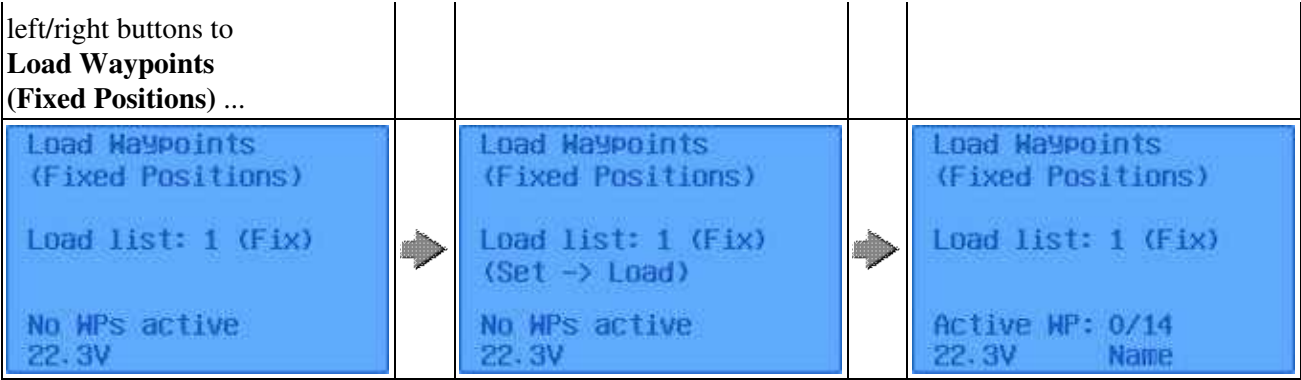

- In "(Fixed position)" the planned waypoints flight is positioned exactly in the place for which it was planned.


**Example:** We have planed a waypoint flight with 30° Rotation:

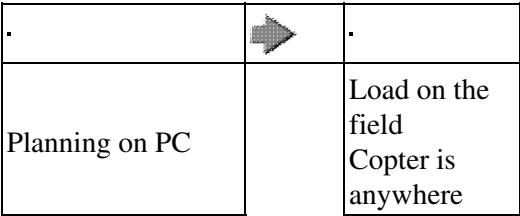

Or


5.1.3 3. load a waypoint flight (Relative Positions)

To load saved waypoints flights ...

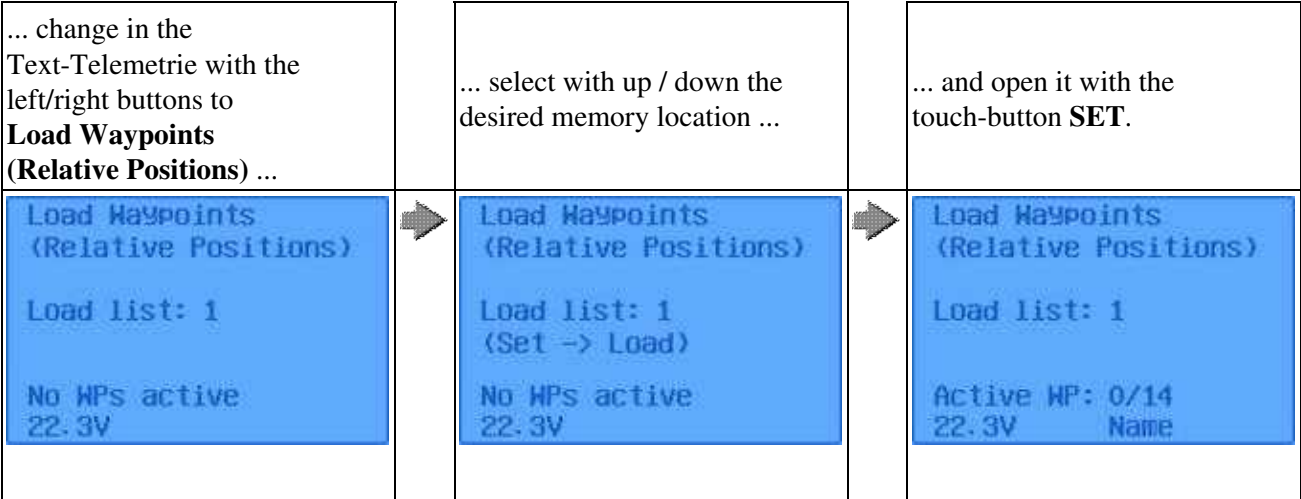

- In "(Relative Position)" the planned waypoints flight is not positioned at the location for which it was planned.  
The waypoints are placed there, at which the copter is currently located. The location of the copter ist then the POI or the first waypoint.

**Example:** We have planed a waypoint flight with 30° Rotation:

		
Planning on PC	Load on the field. Copter is anywhere and pointing toward 0 °.	If you turn the copter in a desired direction (Here, for example, 90°) and if you load the WP flight new, the WP flight will also turn with the copter.

#### 5.1.4 4. fly automatically Relative Waypoints

To start then the automatic waypoint flight, proceed as follows:

- activate [CareFree](#)
- activate [AltitudeHold](#)
- activate [ComingHome](#)

- Normally the function *AltitudeHold* and *PositionHold* are already activted. Then you only have to activate *CareFree*  
and switch from *PositionHold* to *ComingHome* to start the waypoint flight.

If you switch back to *PositionHold* during the waypoint flight, the copter then interrupts the waypoint flight.

Turn back to *ComingHome* to continue the waypoint flight.

To stop and clear the waypoint flight you have to switch to **OFF** (from *PositionHold* or *ComingHome*).

If you now switch to *ComingHome* the copter will fly back to the place where you start and lift of the copter.

## 5.2 Operation via Jeti

It is operated via the buttons **left/right/up/down** on your Jeti-Box.

How to save an on your computer planed waypoint flight on the copter you can see here: [WP-Editor](#)



(example image JetiBox Mini)

### 5.2.1 1. open the Text-Telemetry

The menu to save and load a waypoint flight (Fixed/Relative) can be found in the Text-Telemetry.





After switching on the copter you see "Tx" in the display. With a "click" to the right ...	... you change to "Rx". And with another "click" to the right ...	... to Mx.
	➡	➡
		⬇
A "click" down opens the Text-Telemetry ->		

Once you open the text telemetry, you can reach different subwindows from here. To navigate through the subwindows use the left/right/up/down touch-buttons.

### 5.2.2 2. load a waypoint flight (Fixed Positions)

To load saved waypoints flights ...

--	--	--

... change in the Text-Telemetrie with the left/right buttons to <b>Save singl. Point ...</b>	...	... a "click" downward opens the submenu ...	...	... and select with up / down the desired memory location.
	➡		➡	
				⬇
Ein "Klick" nach rechts speichert dann den Wegpunkt ->				

- In "(Fixed position)" the planned waypoints flight is positioned exactly in the place for which it was planned.





**Example:** We have planed a waypoint flight with 30° Rotation:

.	➡	.
Planning on PC		Load on the field Copter is anywhere


Or

### 5.2.3 3. load a waypoint flight (Relative Positions)

To load saved waypoints flights ...

... change in the Text-Telemetrie with the left/right buttons to <b>Load singl. Point ...</b>	...	... a "click" downward opens the submenu ...	...	... and select with up / down the desired memory location.
	➡		➡	
				⬇
A "click" to the right opens the waypoint ->				

**Example:** We have planed a waypoint flight with 30° Rotation:

		
Planning on PC	Load on the field. Copter is anywhere and pointing toward 0 °.	If you turn the copter in a desired direction (Here, for example, 90°) and if you load the WP flight new, the WP flight will also turn with the copter.

#### 5.2.4 4. fly automatically Fixed Waypoints

To start then the automatic waypoint flight, proceed as follows:

- activate [CareFree](#)
- activate [AltitudeHold](#)
- activate [ComingHome](#)

- Normally the function *AltitudeHold* and *PositionHold* are already activted. Then you only have to activate *CareFree* and switch from *PositionHold* to *ComingHome* to start the waypoint flight.

If you switch back to *PositionHold* during the waypoint flight, the copter then interrupts the waypoint flight.

Turn back to *ComingHome* to continue the waypoint flight.

To stop and clear the waypoint flight you have to switch to **OFF** (from *PositionHold* or *ComingHome*).

If you now switch to *ComingHome* the copter will fly back to the place where you start and lift of the copter.



## 6 Airspeed between the points

If you load a *SinglePoint* waypoint and fly automatically to it, the airspeed is 5m/s (standard in the settings). But you can change the speed in the KopterTool via [Navi-Ctrl2](#). There you will find then the entry *Single WP speed*.


If you will not have a fixed speed you can also use e.g. a potentiometer on your transmitter to change it manually. To do this you need a free channel on your transmitter. This channel you set to the potentiometer on your transmitter and you set this channel also under *Single WP speed* (as Poti).

## 7 Altitudes between the single points:

You can fly with your copter to different places in different altitudes to save a *SinglePoint*. If you fly then between the points, the copter will fly in a direct line between them.

Here the MK flew to two points and they were stored via the transmitter.

Then the points were called and the MK flew automatically between these points (eight times):

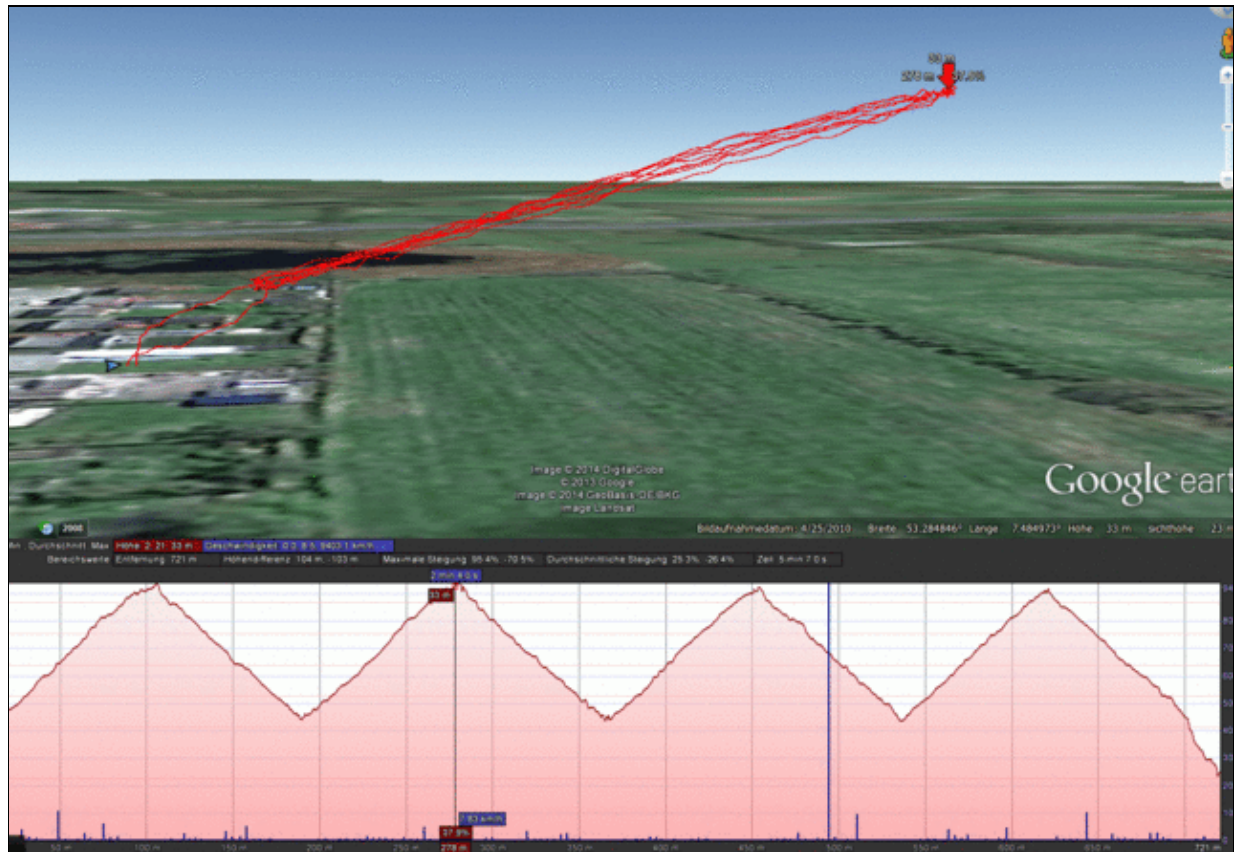

<<BR>

## 8 Video



(Load / save positions)



(Save a camera track)