

# **en/StickSetup/Mode2**

14

LotharF  
MikroKopter.de

This page as an **PDF-Document**? Click on that Symbol and wait a little moment... --->

[StickSetup](#)

**MODE 2**

-  [deutsch](#)
-  [français](#)

Here are the functions described which can be adjusted by different positions of the control stick in Mode 2.

Assignment of the sticks for MODE 2



## Description of the stick assignment for MODE 2

<b>Function =&gt;</b>	<b>Calibration of the ACC</b> (One time necessary. The Kopter must stand straight.)	
<b>Description of the stick assignment =&gt;</b>	Throttle up / Yaw right / Nick middle / Roll middle	

<b>Function =&gt;</b>	<b>Calibration of the Gyros</b> (Before every Start and after disconnecting the power supply.)	
<b>Description of the stick assignment =&gt;</b>	Throttle up / Yaw left / Nick middle / Roll middle	
<b>Function =&gt;</b>	Start to calibrate the Compass  <b>HINT:</b> First pull Nick down.  (The calibration is described here: <a href="#">Calibration of the compass</a> )	
<b>Description of the stick assignment =&gt;</b>	Throttle up / Yaw left / Nick down / Roll middle	

<b>Function =&gt;</b>	<b>Start the engines</b>	
<b>Description of the stick assignment =&gt;</b>	Throttle down / Yaw right / Nick middle / Roll middle	
<b>Function =&gt;</b>	<b>Stop the engines</b>	

Function =>	Selection Setting 1	
Description of the stick assignment =>	Throttle up / Yaw left / Nick middle / Roll left	
Description of the stick assignment =>	Throttle up / Yaw left / Nick up / Roll left	

Function =>	Selection Setting 3	
Description of the stick assignment =>	Throttle up / Yaw left / Nick up / Roll middle	
Description of the stick assignment =>	Throttle up / Yaw left / Nick up / Roll right	

Function =>	Selection Setting 5	
Description of the stick assignment =>	Throttle up / Yaw left / Nick middle / Roll right	