

# **fr/StickSetup/Mode2**

6

LotharF  
MikroKopter.de

This page as an **PDF-Document**? Click on that Symbol and wait a little moment... --->

[StickSetup](#)

**MODE 2**

- [english](#)
- [deutsch](#)

Here are the functions described which can be adjusted by different positions of the control stick in Mode 2.

Assignment of the sticks for MODE 2





Description of the stick assignment for MODE 2



<p><b>Function</b> =&gt;</p>	<p><b>Calibration of the ACC</b>  (One time necessary. The Kopter must stand straight.)</p>
<p><b>Description of the stick assignment</b> =&gt;</p>	<p>Throttle up / Yaw right / Nick middle / Roll middle</p>





<p><b>Function</b> =&gt;</p>	<p><b>Calibration of the Gyros</b>  (Before every Start and after disconnecting the power supply.)</p>
<p><b>Description of the stick assignment</b> =&gt;</p>	<p>Throttle up / Yaw left / Nick middle / Roll middle</p>
<p><b>Function</b> =&gt;</p>	<p><b>Start to calibrate the Compass</b>  <b>TIPP:</b> First pull Nick down.  (The calibration is described here: <a href="#">Kompass kalibrieren</a>)</p>
<p><b>Description of the stick assignment</b> =&gt;</p>	<p>Throttle up / Yaw left / Nick down / Roll middle</p>



<p><b>Function</b> =&gt;</p>	<p><b>Start the engines</b></p>	
<p><b>Description of the stick assignment</b> =&gt;</p>	<p>Throttle down / Yaw right / Nick middle / Roll middle</p>	
<p><b>Function</b> =&gt;</p>	<p><b>Stop the engines</b></p>	
<p><b>Description of the stick assignment</b> =&gt;</p>	<p>Throttle down / Yaw left / Nick middle / Roll middle</p>	

<p><b>Function =&gt;</b></p>	<p><b>Selection Setting 1</b></p>	
<p><b>Description of the stick assignment =&gt;</b></p>	<p>Throttle up / Yaw left / Nick middle / Roll left</p>	
<p><b>Function =&gt;</b></p>	<p><b>Selection Setting 2</b></p>	
<p><b>Description of the stick assignment =&gt;</b></p>	<p>Throttle up / Yaw left / Nick up / Roll left</p>	

<p><b>Function</b> =&gt;</p>	<p><b>Selection</b> <b>Setting 3</b></p>	
<p><b>Description</b> <b>of the stick</b> <b>assignment</b> =&gt;</p>	<p>Throttle up / Yaw left / Nick up / Roll middle</p>	
<p><b>Function</b> =&gt;</p>	<p><b>Selection</b> <b>Setting 4</b></p>	
<p><b>Description</b> <b>of the stick</b> <b>assignment</b> =&gt;</p>	<p>Throttle up / Yaw left / Nick up / Roll right</p>	

Function =>	Selection Setting 5	
<p>Description of the stick assignment =&gt;</p>	<p>Throttle up / Yaw left / Nick middle / Roll right</p>	 <p>The image shows a Futaba MX-20 transmitter. The left stick is labeled 'Gas (throttle)' with a vertical double-headed arrow. The right stick is labeled 'Nick (elevation)' with a vertical double-headed arrow. The left stick's horizontal movement is labeled 'Gier (yaw / rudder)' with a horizontal double-headed arrow. The right stick's horizontal movement is labeled 'Roll (aileron)' with a horizontal double-headed arrow. The transmitter has a central LCD screen displaying 'MODE 2'. Other visible controls include 'CTRL', 'LED', 'POWER', 'ESC', and 'SET' buttons.</p>