

fr/StickSetup/Mode3

7

LotharF
MikroKopter.de

This page as an **PDF-Document**? Click on that Symbol and wait a little moment... --->

[StickSetup](#)

MODE 3

- [english](#)
- [deutsch](#)

Here are the functions described which can be adjusted by different positions of the control stick in Mode 3.

Assignment of the sticks for MODE 3





Description of the stick assignment for MODE 3



<p>Function =></p>	<p>Calibration of the ACC (One time necessary. The Kopter must stand straight.)</p>
<p>Description of the stick assignment =></p>	<p>Throttle up / Yaw right / Nick middle / Roll middle</p>





<p>Function =></p>	<p>Calibration of the Gyros (Before every Start and after disconnecting the power supply.)</p>
<p>Description of the stick assignment =></p>	<p>Throttle up / Yaw left / Nick middle / Roll middle</p>
<p>Function =></p>	<p>Start to calibrate the Compass TIPP: First pull Nick down. (The calibration is described here: Kompass kalibrieren)</p>
<p>Description of the stick assignment =></p>	<p>Throttle up / Yaw left / Nick down / Roll middle</p>



<p>Function =></p>	<p>Start the engines</p>	 <p>The image shows a transmitter in Mode 3. The left stick is moved up and forward, labeled 'Nick (elevation)' and 'Roll (aileron)'. The right stick is moved up and right, labeled 'Gas (throttle)' and 'Gier (yaw / rudder)'. The LCD screen displays 'MODE 3'.</p>
<p>Function =></p>	<p>Stop of the engines</p>	 <p>The image shows a transmitter in Mode 3. The left stick is moved down and forward, labeled 'Nick (elevation)' and 'Roll (aileron)'. The right stick is moved down and right, labeled 'Gas (throttle)' and 'Gier (yaw / rudder)'. The LCD screen displays 'MODE 3'.</p>
<p>Description of the stick assignment =></p>	<p>Throttle down / Yaw right / Nick middle / Roll middle</p>	
<p>Description of the stick assignment =></p>	<p>Throttle down / Yaw left / Nick middle / Roll middle</p>	

<p>Function =></p>	<p>Selection Setting 1</p>	
<p>Description of the stick assignment =></p>	<p>Throttle up / Yaw left / Nick middle / Roll left</p>	
<p>Function =></p>	<p>Selection Setting 2</p>	
<p>Description of the stick assignment =></p>	<p>Throttle up / Yaw left / Nick up / Roll left</p>	

<p>Function =></p>	<p>Selection Setting 3</p>	
<p>Function =></p>	<p>Selection Setting 4</p>	
<p>Description of the stick assignment =></p>	<p>Throttle up / Yaw left / Nick up / Roll middle</p>	<p>Throttle up / Yaw left / Nick up / Roll right</p>

Function =>	Selection Setting 5	
<p>Description of the stick assignment =></p>	<p>Throttle up / Yaw left / Nick middle / Roll right</p>	 <p>The image shows a Futaba MX-20 transmitter. The left stick is labeled 'Nick (elevation)' with a vertical double-headed arrow. The right stick is labeled 'Gas (throttle)' with a vertical double-headed arrow. A horizontal double-headed arrow between the sticks is labeled 'Roll (aileron)'. Another horizontal double-headed arrow below the sticks is labeled 'Gier (yaw / rudder)'. The transmitter has a central LCD screen displaying 'MODE 3'. Other visible controls include 'CTRL7', 'CTRL8', 'LED', 'POWER', 'ESC', and 'SET' buttons.</p>