en/Spacewalker

5

DennisG
MikroKopter.de

Inhaltsverzeichnis

1 Spacewalker.....1/7

2 Bind transmitter with Spacewalker.....3/7

3 Mount the Mini MK-Hood.....4/7

4 MK-Style - Change propellers.....6/7

1 Spacewalker



(Illustration with optional mini MK-Hood)

The Spacewalker is a small, harmless and an easy-to-fly Kopter. This makes it ideal for use as a training Kopter.
All control functions like Throttle, Yaw, Nick and Roll are similar to a big MikroKopter.

INFO: The Spacewalker can only be used with a Devo transmitter (i.e. Devo7). Who has got no Devo transmitter should order the Kopter with a transmitter. If you have already a transmitter like that, you can order the Kopter without the transmitter.

2 Bind transmitter with Spacewalker

Whenever the transmitter is turned on and the LiPo is plugged to the Spacewalker both devices rebind with each other.
That can take a few moments.

Here you can find now the order in which way the transmitter and the Spacewalker bind to each other:

1. All switches on the transmitter need to be pushed away from you. (Important) (otherwise the transmitter "beeps" continuously)
2. Move throttle all the way down.
   ("TH 0%" should appear in the display. If not, the trim can be misadjusted. Adjust it with the trim lever next to the throttle stick.)
3. Switch ON the transmitter - the transmitter makes short "beep-beep" (higher + lower tone)
4. Now connect within 10 seconds the battery on the Kopter:

   - LED on the Kopter blinks fast and after a few seconds the LED lights permanently
   - after another few seconds another "beep-beep" comes from the transmitter and the LED on the Kopter flashes slowly
   - after another few seconds the LED lights permanently on the Kopter.
   - Done!

Now you can move the throttle stick slowly upwards. The motors should start.

3 Mount the Mini MK-Hood

The optional mini MK-Hood can be adjusted in a few steps for the Spacewalker (or for other "Mini-Kopter").

Step1:
Crop the cover




Step2:
Punch holes



(To enlarge -> Click on the image)

TIPP:
The riggers have a diameter of around ~4mm. The punched holes in the hood should have a little bigger diameter.
In that way you can mount the hood later on easier.

Alternatively, the holes can be cut also into the hood with i.e. nail scissors.

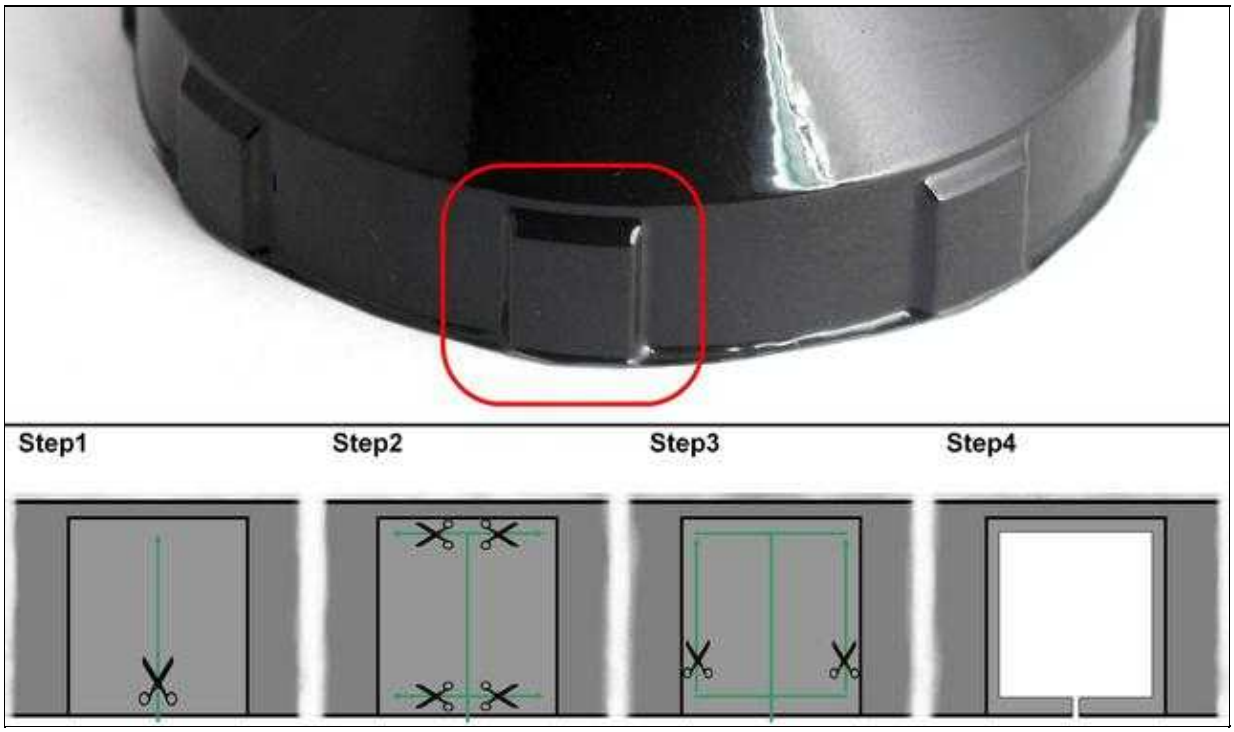

(To enlarge -> Click on the image)

4 MK-Style - Change propellers

Like the big MikroKopter the front rigger is colored different. To have here the same style you can replace the the coloured propellers.

Step1:
Loose the orange back and
the black front
propeller



Step2:
... and switch

-

(To enlarge -> Click on the image)

ATTENTION:
Please make sure when you replace the propellers that the rotation direction of the propellers is not changed.

TIPP:
The propellers are tight on the motors and can be pulled off carefully. They are not glued.