

en/LipoSaver

7


LotharF
MikroKopter.de


Inhaltsverzeichnis

<u>1 LipoSaver</u>	1/7
<u>1.1 Voltage levels</u>	2/7
<u>1.2 Assembling</u>	3/7
<u>2 Use without balancer-connection</u>	5/7
<u>3 Use on 3S</u>	6/7

1 LipoSaver

Buy here: [Shop](#)

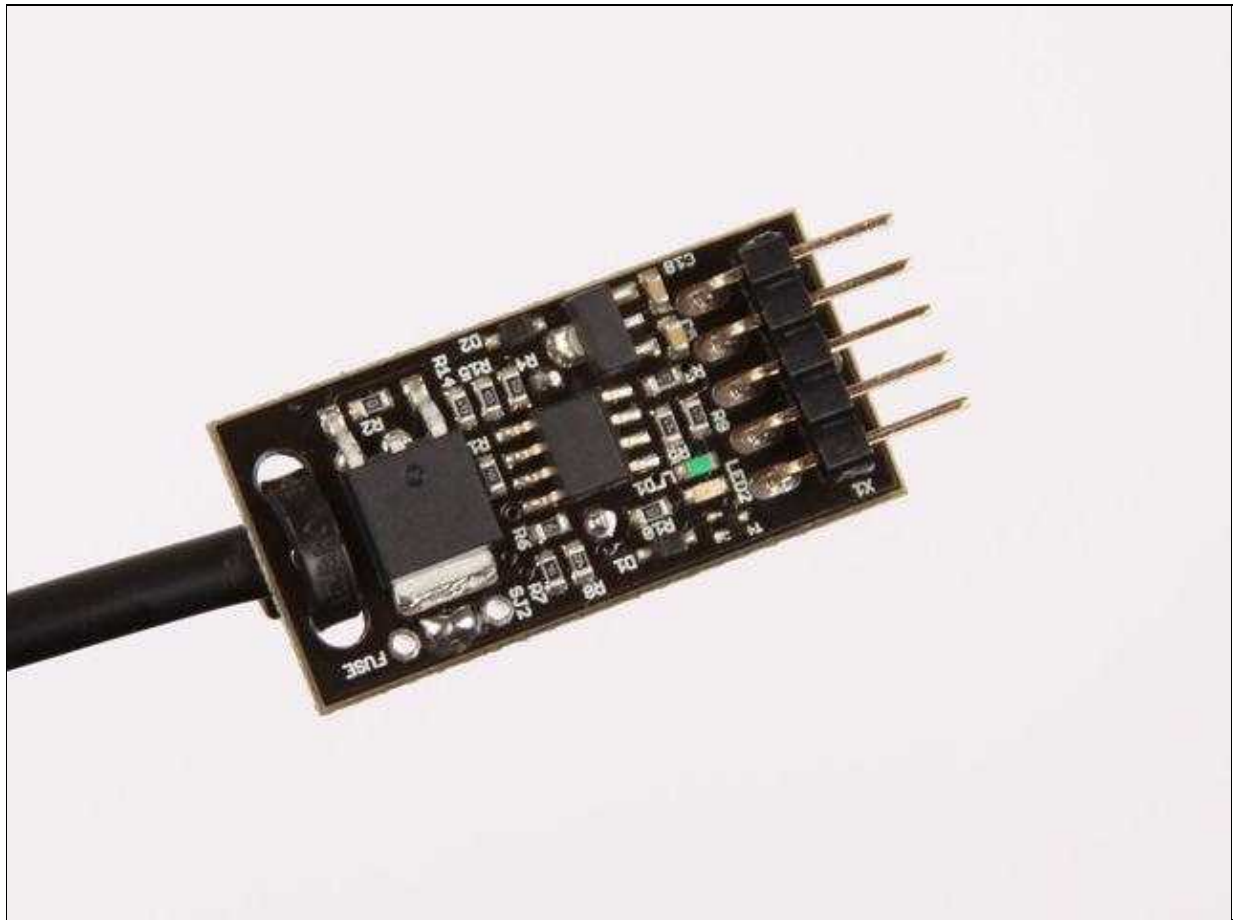

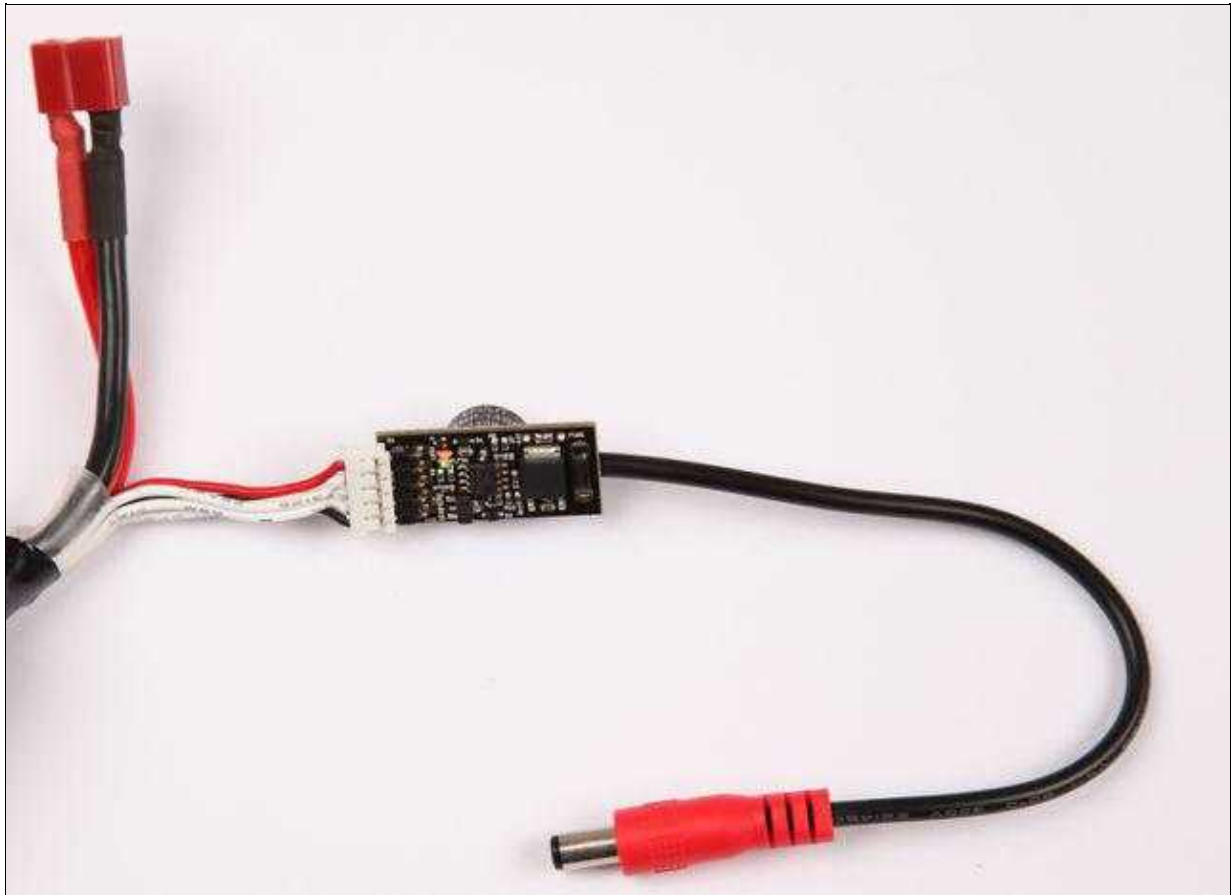

If you want to use a Lipo to supply a device like a Monitor, the problem is, that a undervoltage-Warning is missing.

And if you forget to disconnect the Lipo, the Lipo gets totally discharged and would be damaged.

The [LipoSaver](#):

- Warns you at a low voltage level
- Switches off the power
- Simply connects your Lipo on the balancer-Connector

⚠ Attention: Please note the polarity of the balancer connector (black is negative). If the polarity is reversed, the [LiPoSaver](#) itself gets not damaged. However, then comes out the wrong polarity on the output and could (possibly) damage the connected device.

1.1 Voltage levels

Use on 4-cell-Lipo (4S)

- Warning: Voltage below 13,5V
- Switching off: Voltage below 12,5V
- Switching on: Voltage above 14,9V

Use on 3-cell-Lipo (3S)


- Warning: Voltage below 10,5V
- Switching off: Voltage below 9,4V
- Switching on: Voltage above 11,8V


The [LipoSaver](#) has a certain hysteresis (switch off below 12,5V, but switch on above 14,9V). That avoids that you start with an empty Lipo.

Also: the voltage of the Lipo recovers when the load is missing. The hysteresis avoids that the LipoSaver switches on again after a few minutes.

⚠ Please disconnect the LipoSaver from the Lipo to prevent totally discharge of the Lipo. The Lipo-Saver itself takes about 3mA, that would discharge your Lipo about 0,1Ah per day


1.2 Assembling

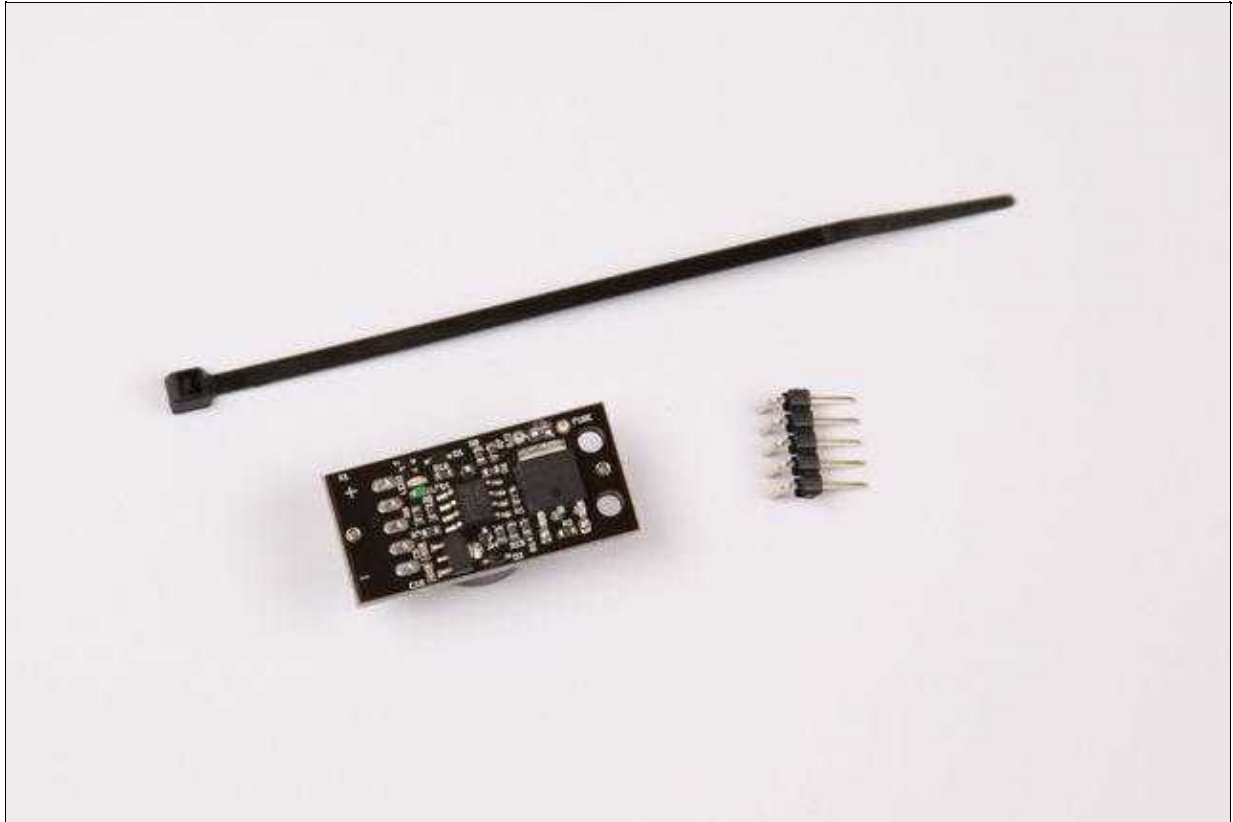

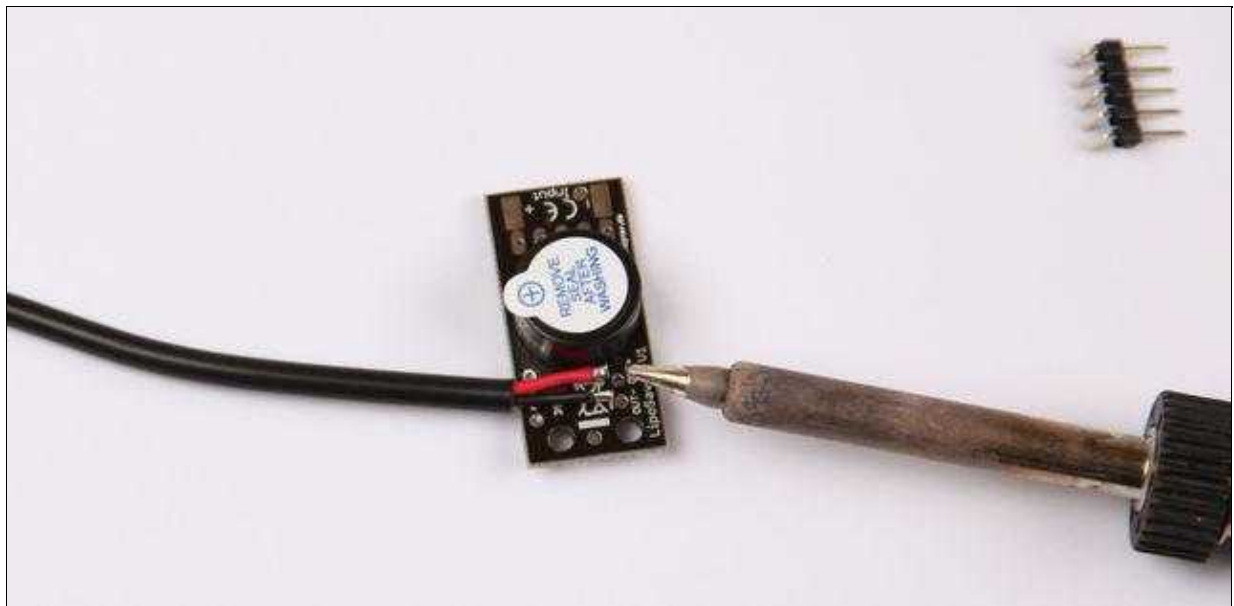

- Solder the output cable
- Attach the cable with the cable tight
- Solder the angled pin-row

2 Use without balancer-connection

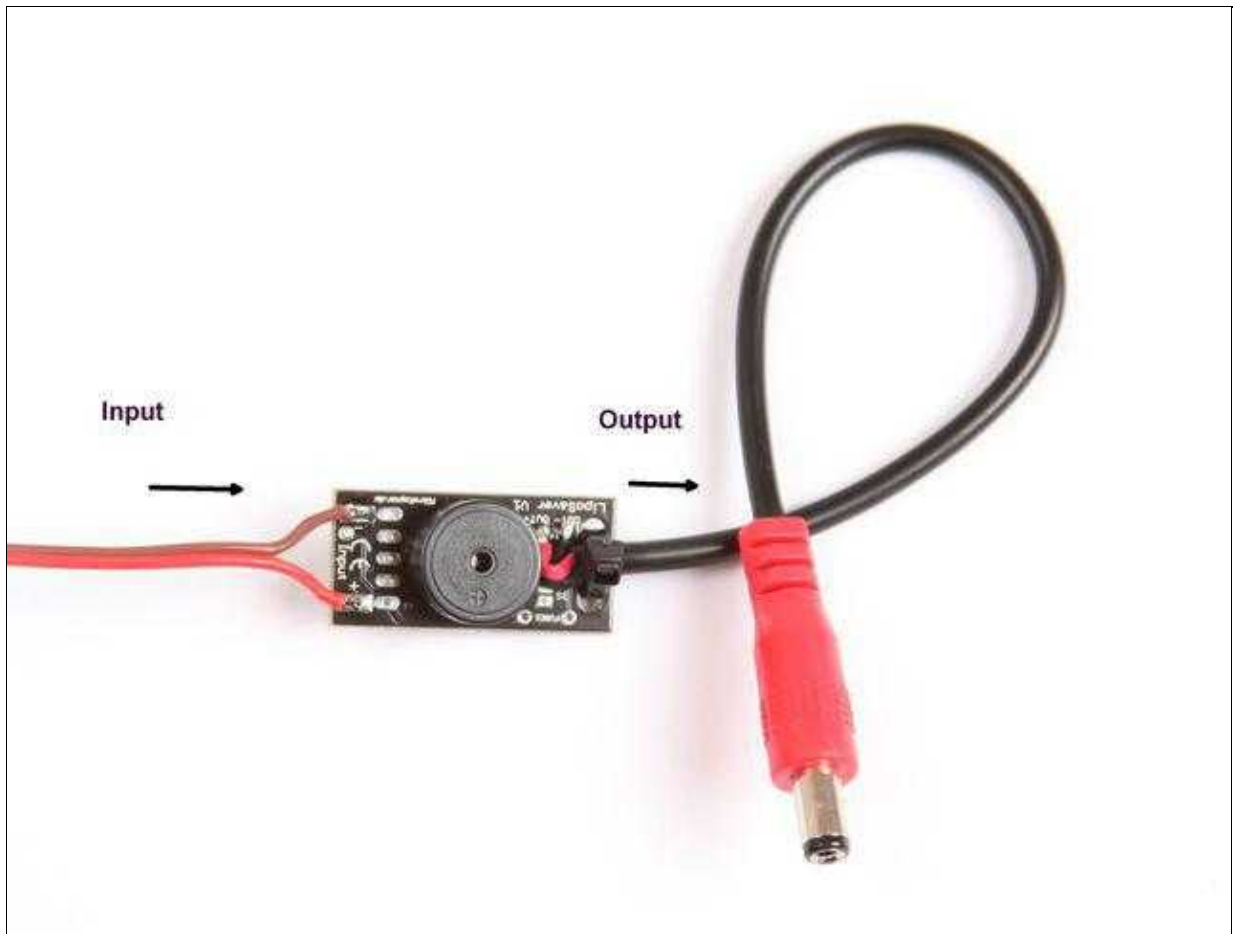

3 Use on 3S

For using on 3s the following changes are required:

- Use only 4-pins row
- Solder the Jumper "3s"

