

en/BL-Ctrl_V1.2

20

LotharF
MikroKopter.de

Contents

<u>1 Differences to BL-Ctrl V1.1</u>	1/9
<u>2 Choosing the address</u>	2/9
<u>3 Software</u>	3/9
<u>4 Assignment of the terminal</u>	4/9
<u>5 Flying with 4S LiPo</u>	5/9
<u>6 Schematic</u>	6/9
<u>7 Troubleshooting</u>	7/9
<u>8 Controlling with own Hardware</u>	8/9
<u>8.1 AVR (plain)</u>	8/9
<u>8.2 Arduino</u>	8/9

1 Differences to BL-Ctrl V1.1

- Visually no difference to BL-Ctrl 1.1
- PCB comes now with **4-layer**
- Better heat dissipation of the FET's and the Shunts
- Transistors T1, T2, T3 are replaced now by transistors with built-in resistors
- Less sensitive to moisture

See also the version history [Ctrl_History](#).

2 Choosing the address

On the V1.2 the motor address is set by a solder jumper on the board.

It is as follows:

Here you can see the addresses and positions of the motor controls and also the direction of rotation of the assigned propeller:
(Click image for high resolution)

.

The connection diagram:

.

3 Software

Depending how many motors you will use on your copter you need for the upper addresses of the BL-Ctrl's a different software. This can be downloaded here:


BL-Ctrl V1.2 - Adr. 1-4: [Download](#)

BL-Ctrl V1.2 - Adr. 5-8: [Download](#)

BL-Ctrl V1.2 - Adr. 9-12: [Download](#)


4 Assignment of the terminal

On the pre-assembled BL-Ctrl V1.2 you need to solder the enclosed Elko:

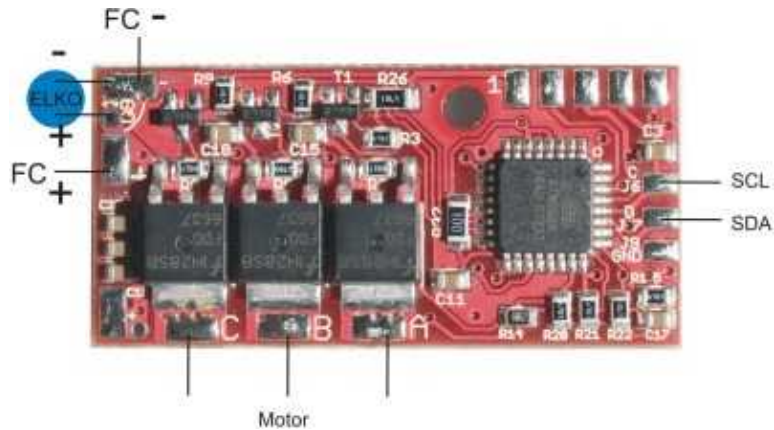

It is advisable to bend the capacitor by 90° so that it fit parallel to the outer side of the board.

Further you can see on the picture how to connect the I2C-Bus-Wires and the power supply.

 The controller is still sensitive to moisture and should be shrink wrapped with shrink tubing! For details see also [BrushlessCtrl](#) and water landing.

5 Flying with 4S LiPo

It is also possible and the same as with the BL-Ctrl V.1.1 to fly the MK with four-cell LiPo's. See also [4S-LiPos](#).

Here you need to adjust the wiring in that way that the BL-Ctrl are hooked up directly to the power supply and not over the switch of the Flight-Ctrl. That is necessary because the switch is not designed for those current and starting flashes coming with the high voltage.

6 Schematic

.

(click for high resolution)

Please note: In version 1.2 for T1-3 the part PDTC143 with integrated base resistor is used. The base resistors R3, R6 and R9 need to be changed through a low-resistance resistor, i.e. 100 Ohm.

7 Troubleshooting

If the BL-Ctrl have a fault, you can see this e.g. on the flashing red LED on the BL-Ctrl.

How to find and fix a fault on this BL-Ctrl you can see here: [Troubleshooting](#)

8 Controlling with own Hardware

Controlling the BL-Ctrl with own hardware is easy.

8.1 AVR (plain)

A sample code for nearly any AVR is given below. The code will spin up the selected motor with a given speed. This is just to give an idea on how to interface them.

```
.. 1 #include <avr/io.h>
.. 2 #include <stdint.h>
.. 3 #include <util/delay.h>
.. 4 // using I2C Master library from
.. 5 // Peter Fleury ( http://jump.to/fleury )
.. 6 #include "i2cmaster.h"
.. 7
.. 8 #define TWI_BLCTRL_BASEADDR 0x52
.. 9
.. 10 int main(void) {
.. 11     i2c_init();
.. 12     uint8_t motor = 0; // 0 -> Motor1, 1 -> Motor2 etc...
.. 13     uint8_t speed = 10;
.. 14     uint8_t ret;
.. 15     while (1) {
.. 16         ret = i2c_start(TWI_BLCTRL_BASEADDR + (motor << 1) +
I2C_WRITE);
.. 17         if (ret) {
.. 18             // release bus
.. 19             i2c_stop();
.. 20             // failed... maybe print error or
something
.. 21         } else {
.. 22             i2c_write(speed);
.. 23             i2c_stop();
.. 24         }
.. 25         _delay_ms(50);
.. 26     }
.. 27 }
```

8.2 Arduino

A sample code for Arduino compatible devices is given below. The code will spin up the selected motor with a given speed. This is just to give an idea on how to interface them.

```
.. 1 #include <Wire.h>
.. 2
.. 3 void setup() {
.. 4     Wire.begin();
.. 5 }
.. 6
```

```
. . 7 #define TWI_BLCTRL_BASEADDR 0x52
. . 8
. . 9 void loop() {
. 10
. 11 . . . . int motor = 0; // 0 -> Motor1, 1 -> Motor2 etc...
. 12 . . . . int speed = 10;
. 13
. 14 . . . . // The Wire library uses 7 bit addresses throughout. If you
have a
. 15 . . . . // datasheet or sample code that uses 8 bit address, you'll
want to
. 16 . . . . // drop the low bit (i.e. shift the value one bit to the
right),
. 17 . . . . // yielding an address between 0 and 127.
. 18 . . . . Wire.beginTransmission((TWI_BLCTRL_BASEADDR + (motor << 1)) >>
1);
. 19 . . . . Wire.write(speed);
. 20 . . . . Wire.endTransmission();
. 21
. 22 . . . . delay(50);
. 23 }

```

-
- KategorieMK-Baugruppe/de